

Do-It-Yourself
DE-WINTERIZATION
QUICK REFERENCE

Instructions

Step 1

Turn off the water to the irrigation system at the emergency valve. Insert your key into the emergency shut off valve and turn to the right.

Step 2

With a flat-head screwdriver, Turn the ¼" test ports to a 45° angle. (Circled in blue below)


Step 3

Turn the ball valve by moving the handle to a 45° angle. (Circled in green below)


Step 4

Set the sprinkler timer to the "Off" setting.

PVB - Pressure Vacuum Breaker

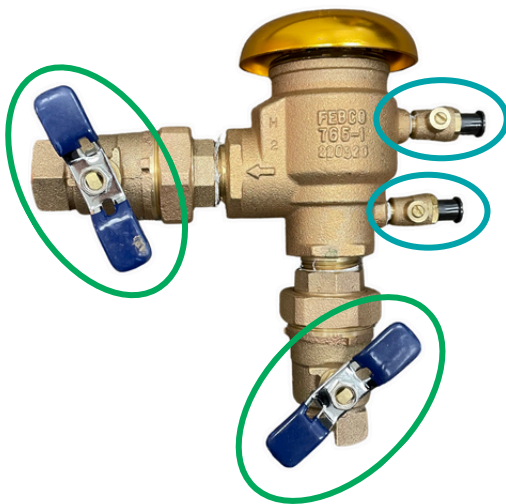

RP - Reduced Pressure Backflow

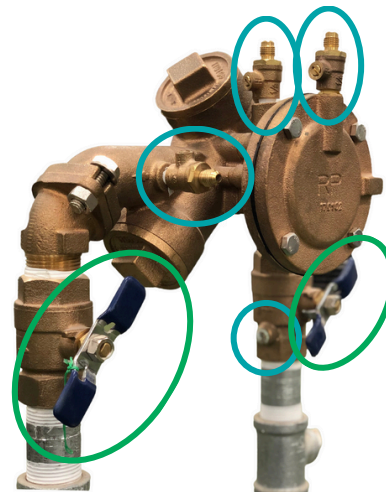

For Video
Instructions Visit our YouTube

 **@Justsprinklersnm**